




Bose SoundLink Color Battery Replacement

This guide will demonstrate how to replace the battery in a Bose SoundLink Color.

Written By: Michael Thorn

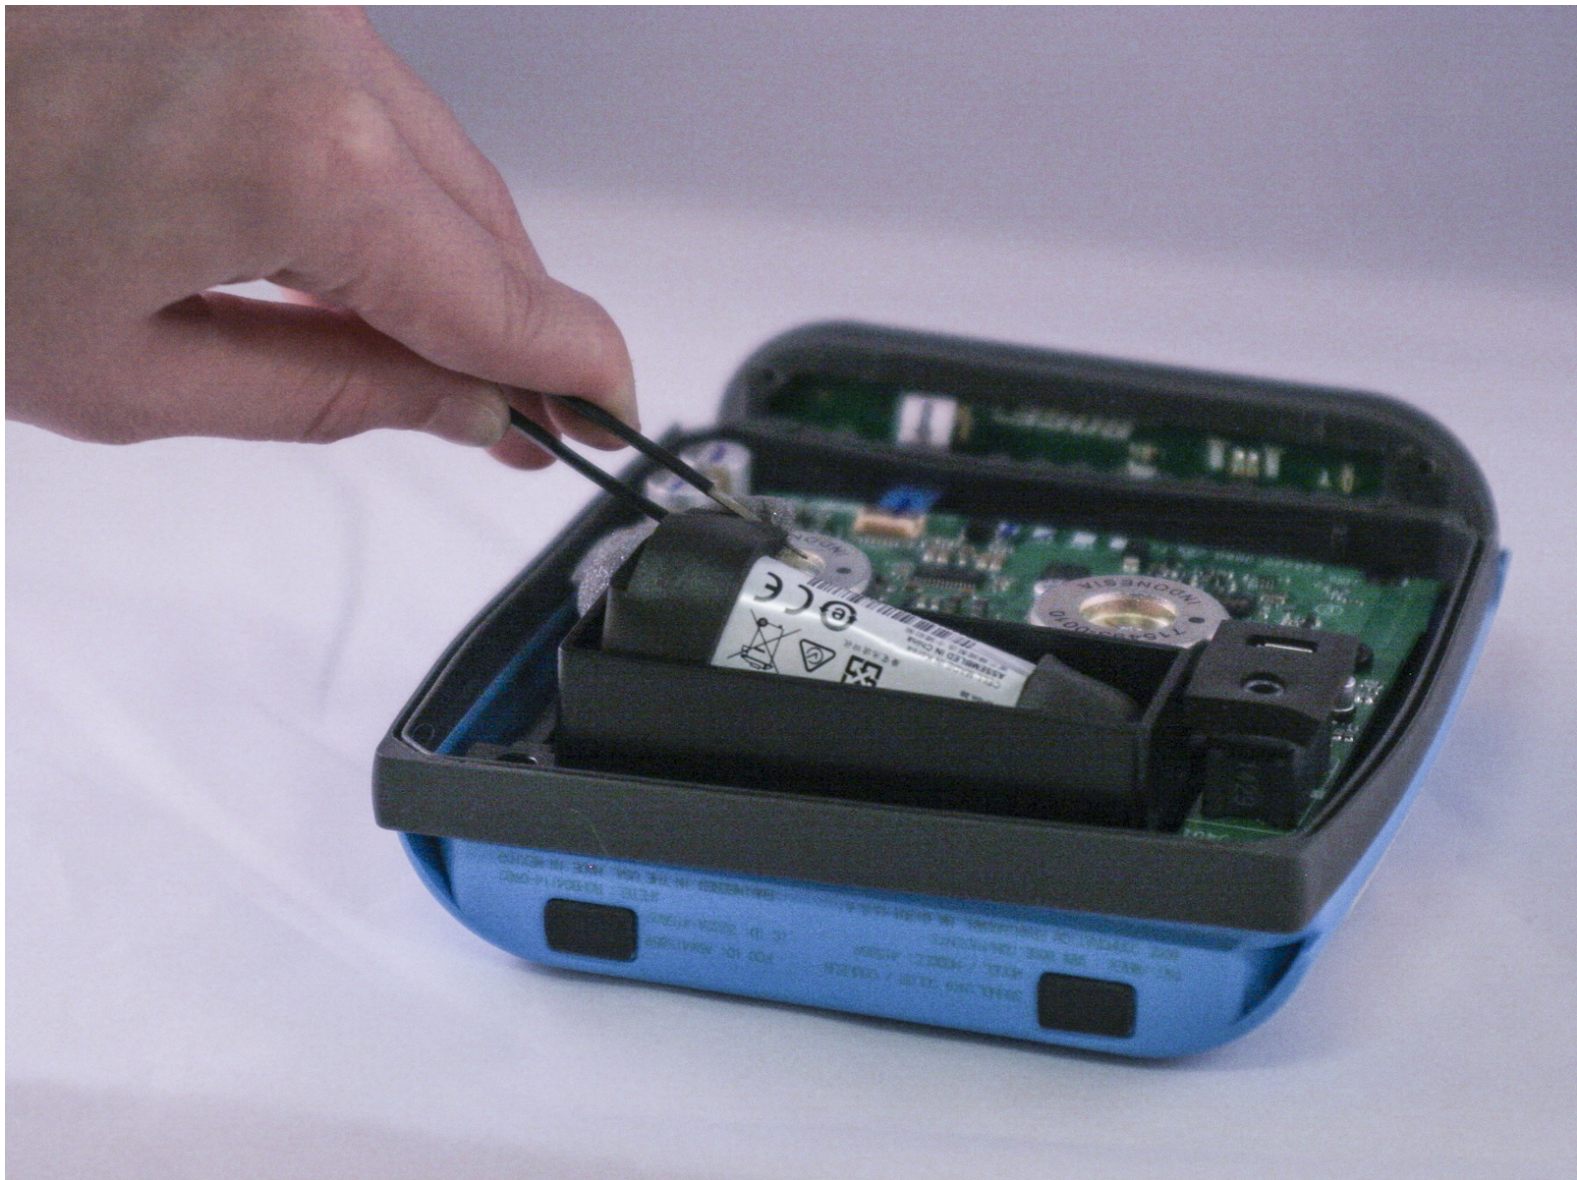

INTRODUCTION

The SoundLink Color's battery is known to lose charge after a few months of usage. This guide will show, step by step, how to take apart the device and replace the battery.



TOOLS:

- [Metal Spudger](#) (1)
 - [Tamper Resistant TORX Plus TR Bit](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Pro Tech Toolkit](#) (1)
 - [Soldering Station](#) (1)
-

Step 1 — Outer Casing



i Four round, plastic plugs are located on the back of the device.

- Using a metal spudger, carefully pry up the plastic covers.

! The covers are all glued on, so be careful not to scar the casing when prying them off. If possible, use a spudger or plastic opening tool to remove them.

Step 2




- Remove the four 1.8 cm Torx Plus TR screws from the outer case.

Step 3





- Carefully open up the casing.
- ☑ The top button pad may need to be re-glued upon installing the new casing.

Step 4 — Battery

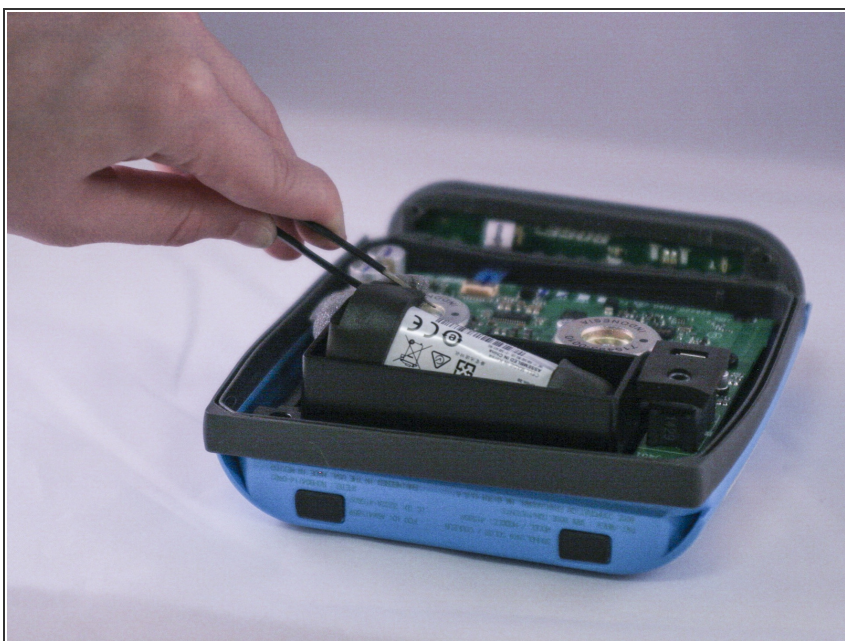

- Carefully remove the battery using a pair of tweezers.
- Lift the inner assembly from the outer casing.

Step 5

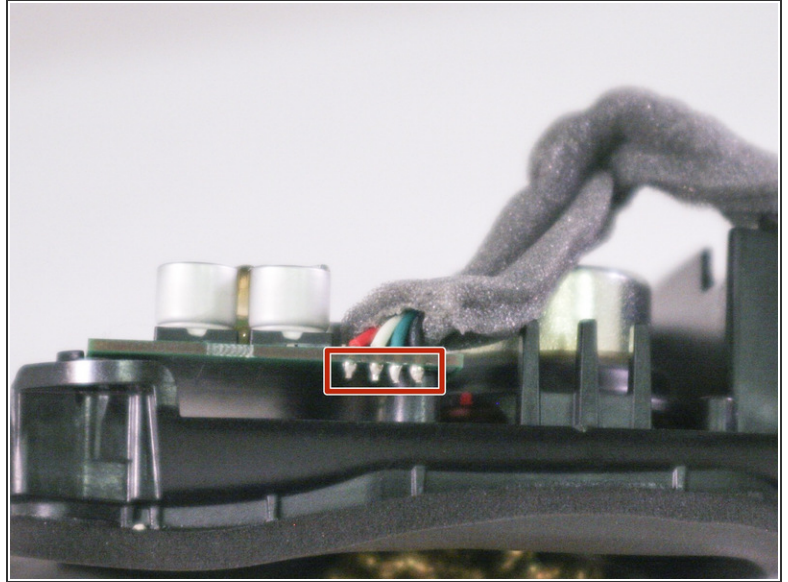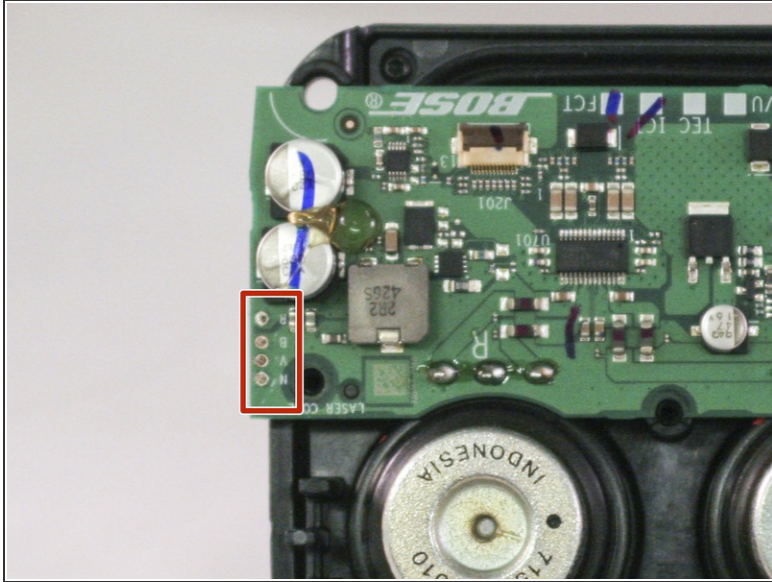

- Desolder the four wires that connect the battery to the motherboard.
 - ❗ The letters on the front of the motherboard next to each soldering point correspond to the color's name in Spanish.
 - N = Negro = Black
 - V = Verde = Green
 - B = Blanco = White
 - R = Rojo = Red

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-29 11:24:07 AM.